


PACmate QX Series

QX400 • QX420 • QX440

The revolutionary **PACmate BX Series** incorporates JAWS®, the world's most popular screen reader, and Microsoft® Pocket PC to create the world's first accessible Pocket PC device for those who are blind.

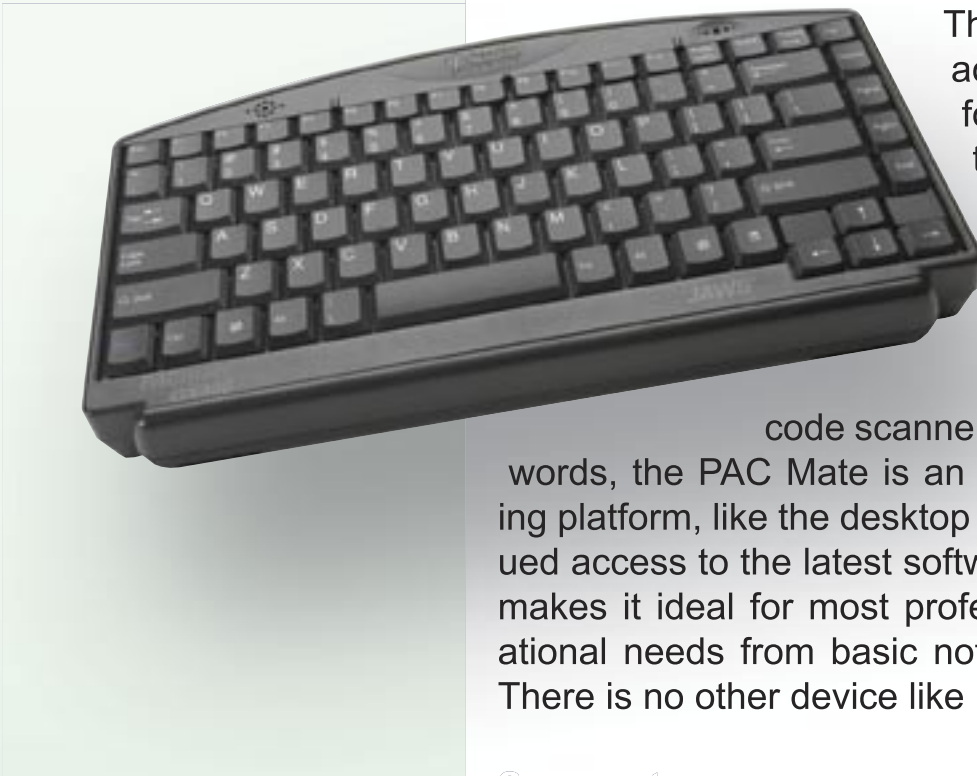

Mainstream platform

This QWERTY-style device is an accessible industry standard platform. It provides not only access to Microsoft Pocket PC software but it will also run other third-party software, for example software to control your cell phone. It is easy to add third party hardware, such as a bar-

code scanner or a wireless LAN card. In other words, the PAC Mate is an accessible mainstream computing platform, like the desktop PC, which means having continued access to the latest software and hardware. Its versatility makes it ideal for most professional, educational and recreational needs from basic notetaking to mobile Web access. There is no other device like it in the world.

So easy to use

Turn on a PAC Mate and hear the familiar Eloquence speech synthesis run by JAWS. If you know JAWS, you already know how to use this product. If you get stuck, there is context sensitive help, keyboard help, even Windows help available.

Modular Braille

Add a 20 or 40-cell Braille display to the PAC Mate in seconds without tools or cables. Just release the latch in the back of the unit and snap in a PAC Mate Portable Braille Display. Remove the display just as easily to use it with your desktop or laptop computer via USB. The economy and flexibility in this design means you get the most from your Braille display investment.



Unmatched document management

The PAC Mate runs “small” or “Pocket” versions of the popular Microsoft Office applications and uses ActiveSync to seamlessly integrate with a desktop computer. Manage your e-mail and appointments anywhere throughout the day on your PAC Mate and connect with your desktop to automatically synchronize, update and send. E-mail, contacts, appointments, files, tasks, even web content is effortlessly updated every time you connect.

Connectivity beyond compare

The PAC Mate QX Series is compact, but very extensible. Sporting two CompactFlash Type II slots, it can drive many of the available off-the-shelf peripherals compatible with Pocket PC 2003. Add a WiFi card to access the internet wirelessly. Check your e-mail using a modem and your cell phone. Forget cables and connect to your desktop, cell phone, or printer with Bluetooth. Even add a bar code scanner. Use one slot for virtually unlimited compact flash memory and the other for connectivity. The two-way Infrared port lets you share documents wirelessly between PAC Mates and other IrDA enabled devices. You can even use it to print or emboss.



Contact your local dealer or contact us:

Freedom Scientific
Blind/Low Vision Group
11800 31st Court North
St. Petersburg, Florida
33716-1805
Phone/Sales: 800-444-4443
727-803-8000
Fax: 727- 803-8001
info@FreedomScientific.com
www.FreedomScientific.com



Features:

- Microsoft® Windows® Mobile™ 2003 software for Pocket PC
- JAWS® screen reader with Eloquence Speech
- Inbox, Calendar, Contacts, Notes, Pocket Word, Pocket Internet Explorer
- Pocket Excel, Windows Media Player 9 (MP3, audio and video streaming)
- Freedom Scientific accessible applications - FSEdit, FS Calc, Stop Watch
- Intel® Xscale™ 400MHz processor
- 64Mb RAM/32Mb Flash ROM
- Lithium Polymer rechargeable battery
- 12V ac adapter/charger
- Carrying case and shoulder strap
- 88-key QWERTY keyboard
- Voice recorder
- USB type Mini A/B - 2.0 compliant
- IrDA 115kB/second infrared port
- 2 CompactFlash Type II ports
- Microphone/speaker
- Dual channel sound

